

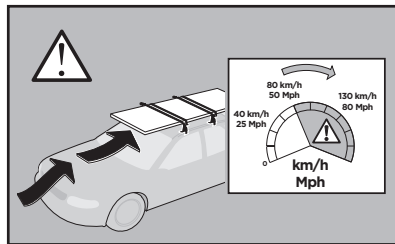
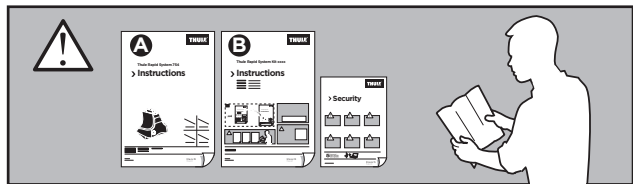


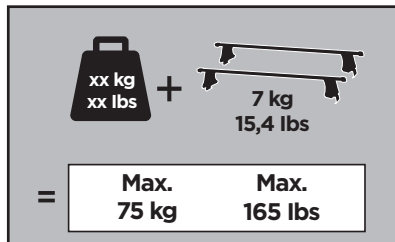

Thule Rapid System Kit 1431

> Instructions

SUBARU Tribeca, 5-dr SUV, 06-

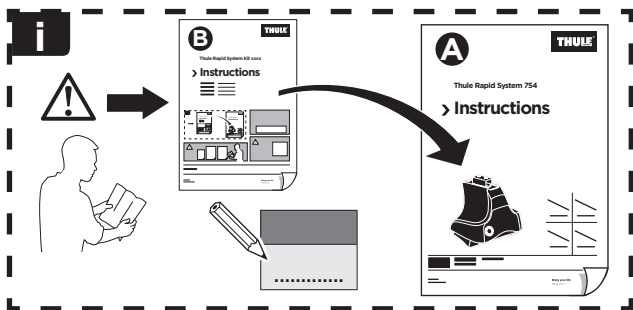

ISO 11154-E

141431

C.20130617
519-1431-02


Bring your life
thule.com




178 x2



191 x1



192 x1



862 x2



1214 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
SUBARU Tribeca, 5-dr SUV, 06-	52,5	1176	46 1/4

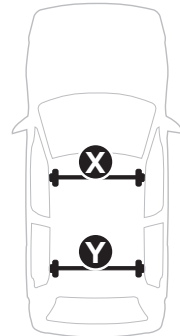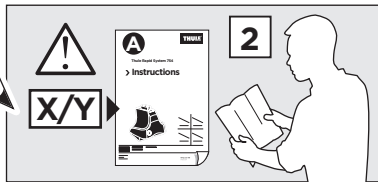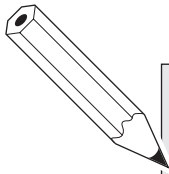


	Y (scale)	Y (mm)	Y (inch)
SUBARU Tribeca, 5-dr SUV, 06-	47	1121	44 1/8

2

SUBARU Tribeca, 5-dr SUV, 06-

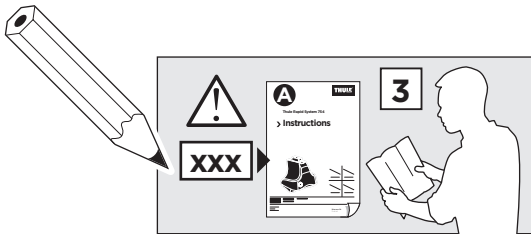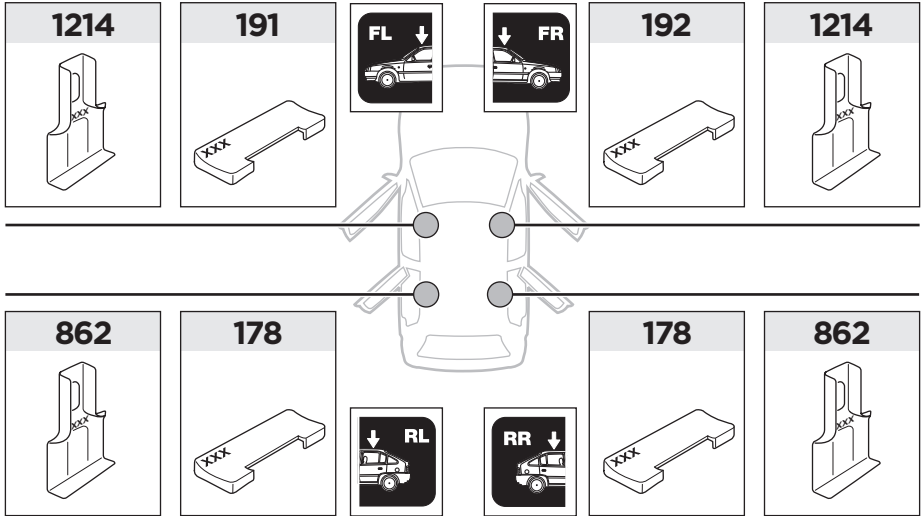

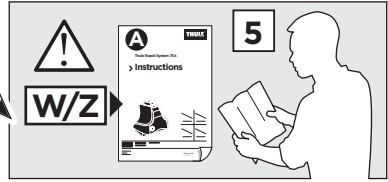3

	W (mm)	Z (mm)	W (inch)	Z (inch)
SUBARU Tribeca, 5-dr SUV, 06-	300	750	11 ³/₄	29 ¹/₂

